

XAC COB Pushbutton Switch



COB-61

COB-62

COB-63

COB-64

COB-64A

COB-63A

COB-62A

COB-61A



XAC-A271
XAC-A281

XAC-A471
XAC-A481

XAC-A671
XAC-A681

XAC-A871
XAC-A881

XAC-A2713
XAC-A2813

XAC-A4713
XAC-A4813

XAC-A6713
XAC-A6813

XAC-8713
AAC-8813



LLCOB-371

LLCOB-571

LLCOB-771

LLCOB-971

LLCOB-1171

STX-1

STX-2



Type 1021
AC250V10A
ON-OFF

Type 1122
AC250V10A
ON-OFF-ON

Type 1322
AC250V10A
ON-OFF-ON

Type 1121
AC250V10A
ON-ON

Type 1221
AC250V10A
ON-OFF

Type 1321
AC250V/10A
ON-ON

LA-D12

LA-D16