

## XB2 Pilot Light & Pushbutton 按钮开关



XB2-BA3341C

Description	Contact type	Color	Reference
Flat	N/O	Green	XB2-BA3311
			ZB2BZ101+ZB2BA331
		White	XB2-BA3341
			ZB2BZ101+ZB2BA334
		Black	XB2-BA3351
			ZB2BZ101+ZB2BA335
Protruding	N/C	Red	XB2-BA4322
			ZB2BZ102+ZB2BA432
		Stop	XB2-BA4342
			ZB2BZ102+ZB2BA434
		Red	XB2-BL4322
			ZB2BZ102+ZB2BA432
Stop	XB2-BL4342		
	ZB2BZ102+ZB2BA434		




XB2-BL31

Description	Contact type	Color	Reference
Flat	N/O	Black	XB2-BL21
			ZB2BZ101+ZB2BL2
		Green	XB2-BL31
			ZB2BZ101+ZB2BL3
		Yellow	XB2-BL51
			ZB2BZ101+ZB2BL5
		Blue	XB2-BL61
			ZB2BZ101+ZB2BL6
		Black	XB2-BL22
			ZB2BZ102+ZB2BL2
		Red	XB2-BL42
			ZB2BZ102+ZB2BL4
		Black	XB2-BP21
			ZB2BZ101+ZB2BP2
Green	XB2-BP31		
	ZB2BZ101+ZB2BP3		
Yellow	XB2-BP51		
	ZB2BZ101+ZB2BP5		
Blue	XB2-BP61		
	ZB2BZ101+ZB2BP6		
Red	XB2-BP42		
	ZB2BZ102+ZB2BP4		
Mushroom head Φ40mm	N/O	Black	XB2-BC21
			ZB2BZ101+ZB2BC2
		Green	XB2-BC31
			ZB2BZ101+ZB2BC3
		Yellow	XB2-BC51
			ZB2BZ101+ZB2BC5
Blue	XB2-BC61		
	ZB2BZ101+ZB2BC6		
	N/C	Red	XB2-BC42
			ZB2BZ102+ZB2BC4



XB2-BP31

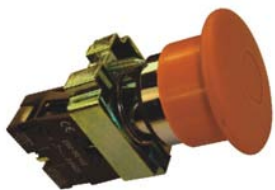

XB2-BC42

Explain	Contact type	Key removal	Reference
2 positions stay put	N/O	left	XB2-BG21
		left or right	ZB2BZ101+ZB2BG2
	N/C+N/O	left	XB2-BG41
		left or right	ZB2BZ101+ZB2BG4
2 positions stay put 1 Return from right to left	N/O	left	XB2-BG25
		left or right	ZB2BZ105+ZB2BG2
		left or right	XB2-BG45
		left or right	ZB2BZ105+ZB2BG4
2 positions stay put	N/C+N/O	left	XB2-BG61
		left or right	ZB2BZ101+ZB2BG6
3 positions stay put	N/O+N/O	left or right	XB2-BG65
		center	ZB2BZ105+ZB2BG6
		left or right	XB2-BG33
		left or right	ZB2BZ103+ZB2BG3
	N/O+N/O	center	XB2-BG53
		left or right	ZB2BZ103+ZB2BG5
		all 3 position	XB2-BG03C
		center	ZB2BZ103C+ZB2BG0C
		center	XB2-BG73C
		center	ZB2BZ103C+ZB2BG7C



XB2-BG21